

Power Tools Service Manual

PRODUCT NAME ""

18 V Cordless Work Light Model UB 18DJL

CONTENTS	Page
SPARE PARTS	 1
1. Spare parts -	 1

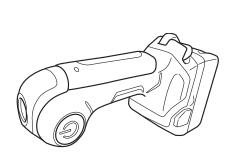

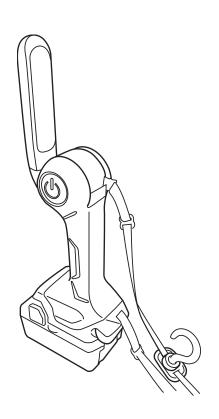



SPARE PARTS


1. Spare parts


[Bold] numbers in the description below correspond to the item numbers in the Parts List and exploded assembly diagram for the Model UB 18DJL.

The spare parts for the Model UB 18DJL are as follows.

- (1) Light Seat Set [1]
- (2) Tapping Screw D2.3 x 8 (Black) [2]
- (3) Pothook [501] (Strap hook)
- (4) Gallus [502] (Strap)

CAUTION: Turn the switch off and remove the battery before replacement as shown in Fig. 2.

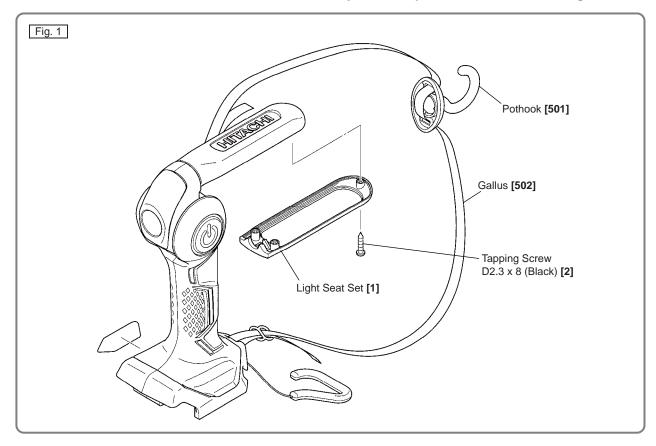

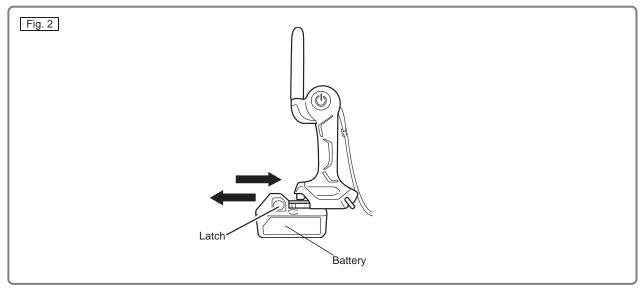


ELECTRIC TOOL PARTS LIST

■ CORDLESS WORK LIGHT Model UB 18DJL

2014-2-20

(E1)

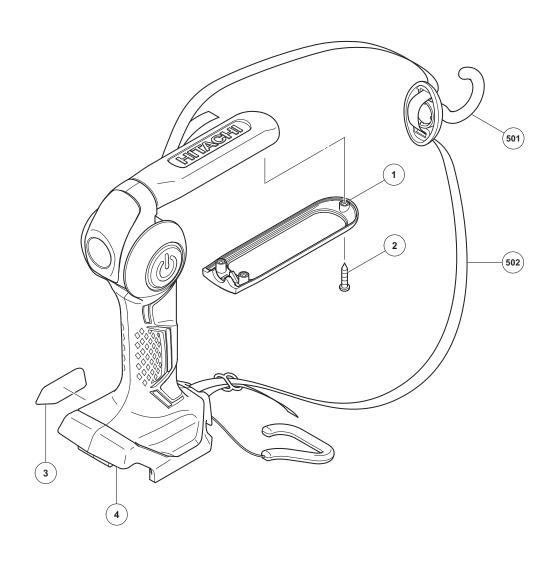

PARTS UB 18DJL

ITEM NO.	CODE NO.	DESCRIPTION	NO. USED	REMARKS	
1	336569	LIGHT SEAT SET	1		
2	336522	TAPPING SCREW D2.3 X 8 (BLACK)	3		
3		NAME PLATE	1		
4		MAIN BODY	1		

STANDARD ACCESSORIES

ITEM NO.	TANDARD ACCESSORIES ITEM NO. CODE NO. DESCRIPTION NO. USED REMARKS							
	CODE NO.			REMARKS				
501	336520	РОТНООК	1					
502	336558	GALLUS	1					
- 2 -		*ALTER	NATIVE PARTS	Printed in Japan	2 - 14			